
PRIME SERIES BIN BOX RAIL ASSEMBLY



STEP 1

Before installation, determine the preferred vertical order of all workstation accessories.

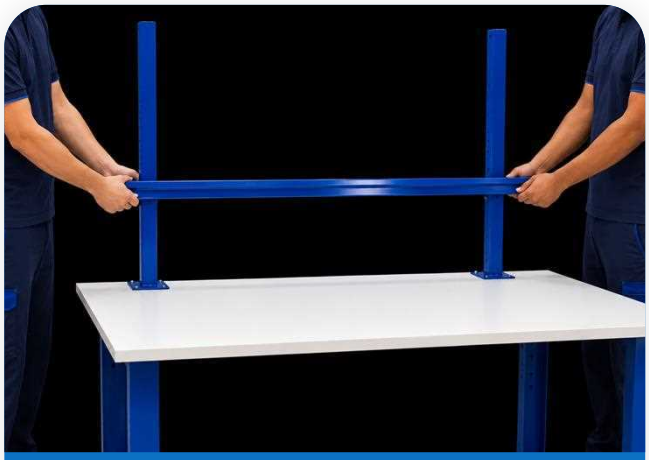

STEP 2

Start with the accessories you want at the lowest position on the upright.
Carefully slide the bin box rail assembly down over the workstation uprights until it reaches the desired height and position.



STEP 3

Align the mounting bracket so the adjustment knob bolt enters the dent in the back of the upright. Hand-tighten the knob until the assembly is secure and properly aligned. Do not overtighten.