PRO SERIES OVERHEAD LIGHT INSTALLATION




STEP 1

With assistance from a second person, unpack the light frame and form it into a "C" shape. Ensure the adjustment knobs are loosened sufficiently, then lower the frame over the workstation uprights and position it at the desired location.



STEP 2

Hand-tighten the adjustment knobs to secure the frame. The knobs only need to be snug; do not overtighten.

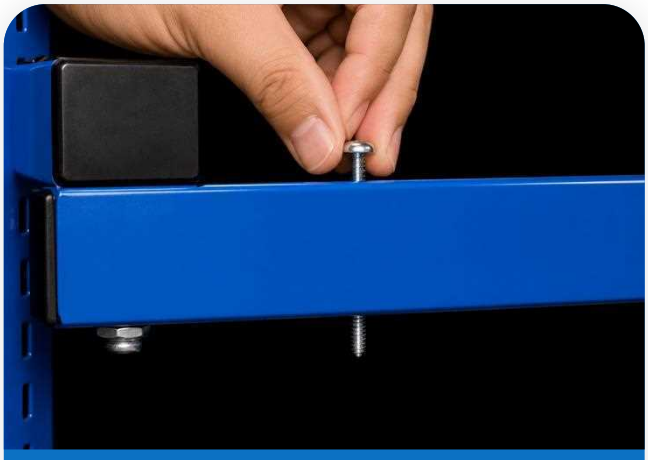


STEP 3

Insert the two supplied sheet metal screws with washers into the mounting holes located on the top of the horizontal frame member.



STEP 4

Position the light fixture beneath the frame with the light facing downward and locate the two nylon mounting fasteners on the fixture.

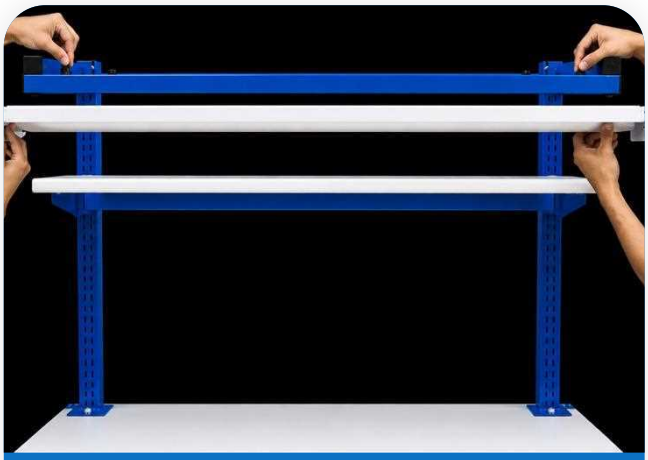

STEP 5

Align the mounting screws with the nylon fasteners, then tighten the screws until the light fixture is securely attached to the light frame.
Insert the screws and tighten them until the light is secure against the bottom of the light frame bracket hinges.